HR-09U Type2 MOSFET Heatsink

Exploded View

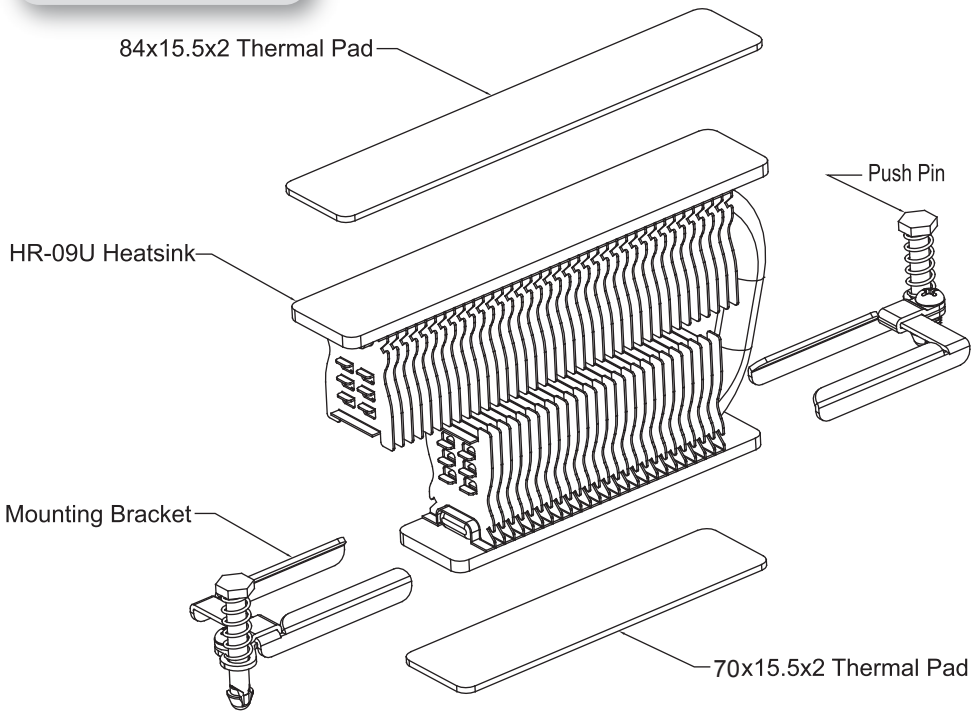

Component

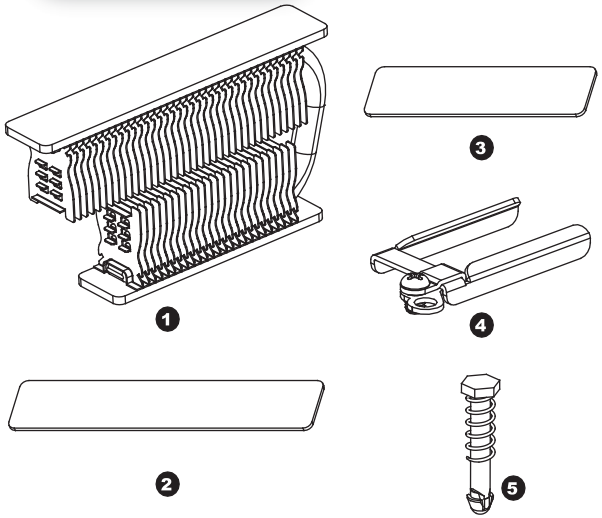

Part Name	Piece(s)
❶ HR-09U Heatsink	1
❷ 84x15.5x2 Thermal Pad	1
❸ 70x15.5x2 Thermal Pad	1
❹ Mounting Bracket	2
❺ Push Pin	2

Installation

Important! Before proceeding with installation, please check for the most up-to-date instructions at www.thermalright.com

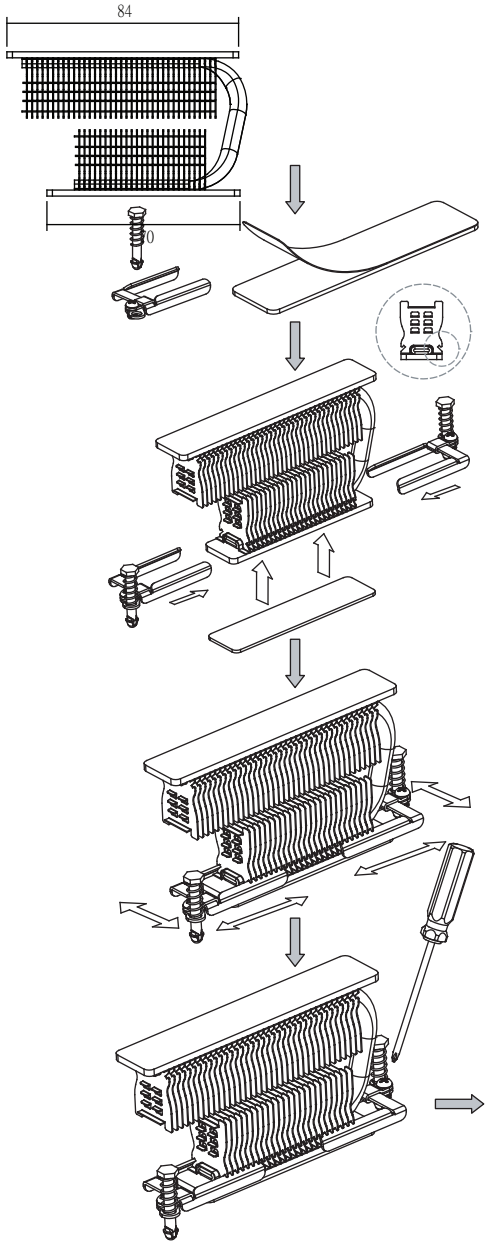

Step 1: Selecting proper base length for Installation

Remove Mosfet stock cooler and select the proper side on the HR-09, in accordance to the Mosfet length, to install on your Mosfet.

Step 2: Application of thermal pad and Mounting Mechanism

Select the proper thermal pad in length and stick it to the surface of the copper base and then fit the slide track from the mounting brackets to the heatsink base.

Step 3: Selecting the proper push pin mounting hole

Align the push pins to the mounting holes on the motherboard and then screw in to secure the push pins.

Step 4: Securing the heatsink

Place heatsink base on top of Mosfet and push down on push pins to secure heatsink in place.